

SikaDecor®-801 Nature/-803 Nature **Décor Microcemento**

BUILDING TRUST



INSTALLATION PROCEDURE


1- SURFACE PRIMER

2- SURFACE LEVELLING

3- FINAL DÉCOR SURFACE

4- SEALER

Sikadecor – system

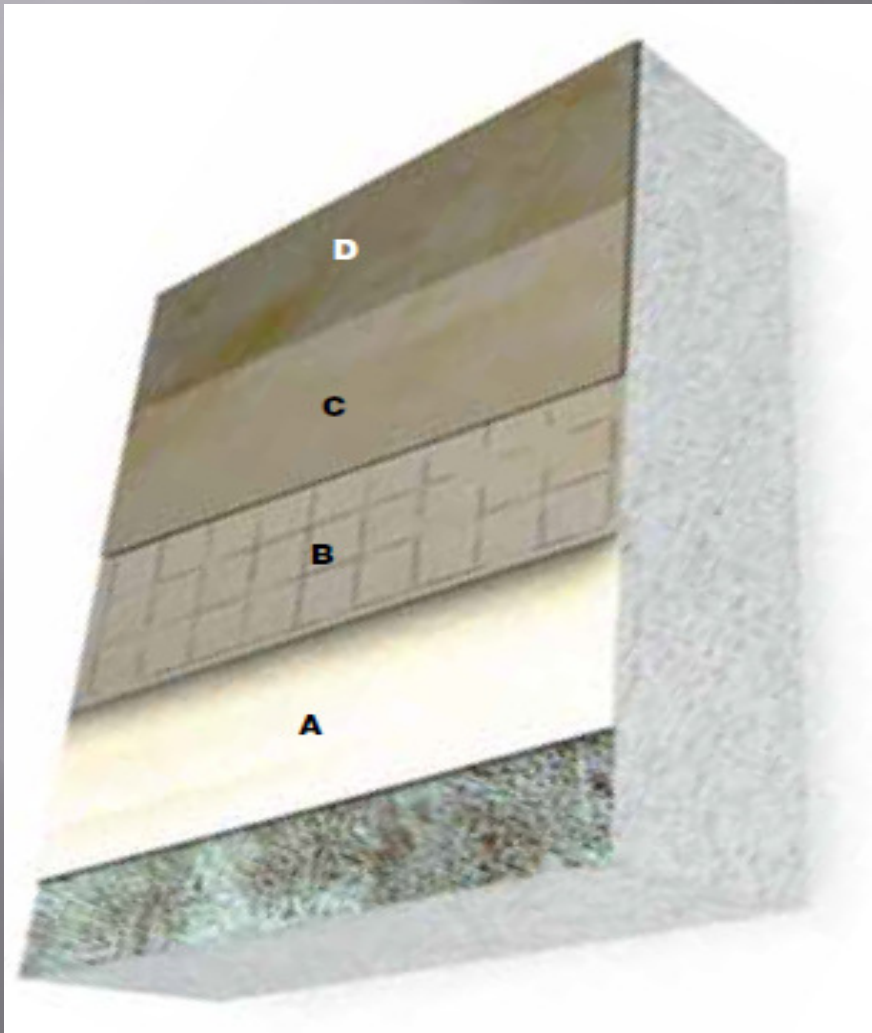

- A SIKATOP 10
SIKA PRIMER 11
- B SIKADecor -803
+ FIBERNET
- C SIKADecor -801
+ SIKADecor COLOR
- D SIKAFLOOR 304 W
SIKAGARD 907 W

Priming with Sikatop 10



July 10, 2015

Priming with Sikatop 10



July 10, 2015

Priming with Sikatop 10



July 10, 2015

Priming with Sikatop 10



July 10, 2015

Reinforcement net (sika fibernet)



July 10, 2015

(Sika decor 803)



July 10, 2015

1st layer, levelling with sikadecor 803



July 10, 2015

Placement of reinforcement net (sika fibernet)




July 10, 2015

Surface rendering



July 10, 2015

1st layer with Sika Décor 803 & fibernet installed

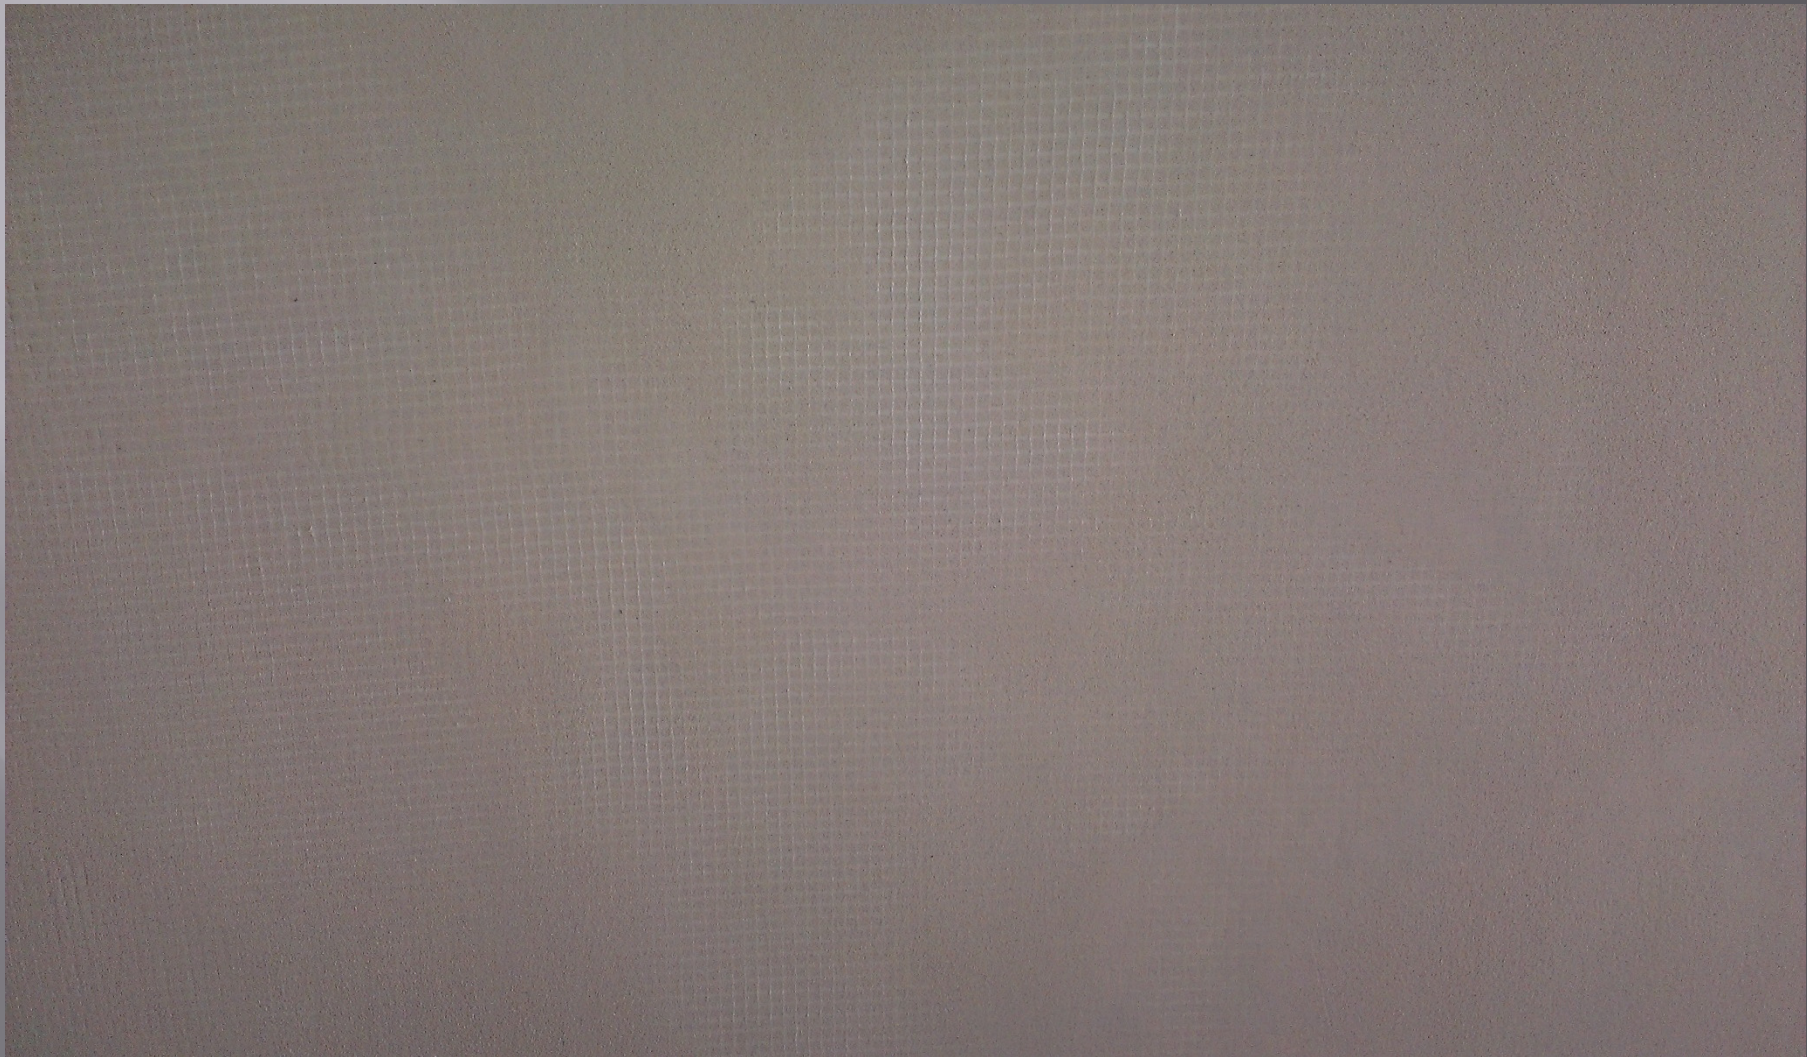

July 10, 2015

2nd layer with Sikadecor 803



July 10, 2015

Final surface with Sika Décor 803



July 10, 2015

Surface rendering



July 10, 2015

Procedure with for final surface with Sikadecor 801



July 10, 2015

Preparation (décor color to be mixed with the liquid part of Sika Décor 801)



July 10, 2015

Existing surface moisturing before application of Sika Décor 801



July 10, 2015

Application of Sika décor 801



July 10, 2015

Surface rendering



July 10, 2015

Καθάρισμα τελικής επιφάνειας



July 10, 2015

Sealer Sikafloor 304 W



July 10, 2015

Sealer (Sikafloor 304 w)



July 10, 2015

Final surface of Sika Décor System



July 10, 2015